

GESSI®

38713

GPF387130G001G000

data di validità/validity date
≥ 11/2023



HI-FI COMFORT

Parti esterne per miscelatore termostatico a due funzioni simultanee, con pulsanti on/off.

External parts for thermostatic mixer for two simultaneous functions, with push-button on/off controls.

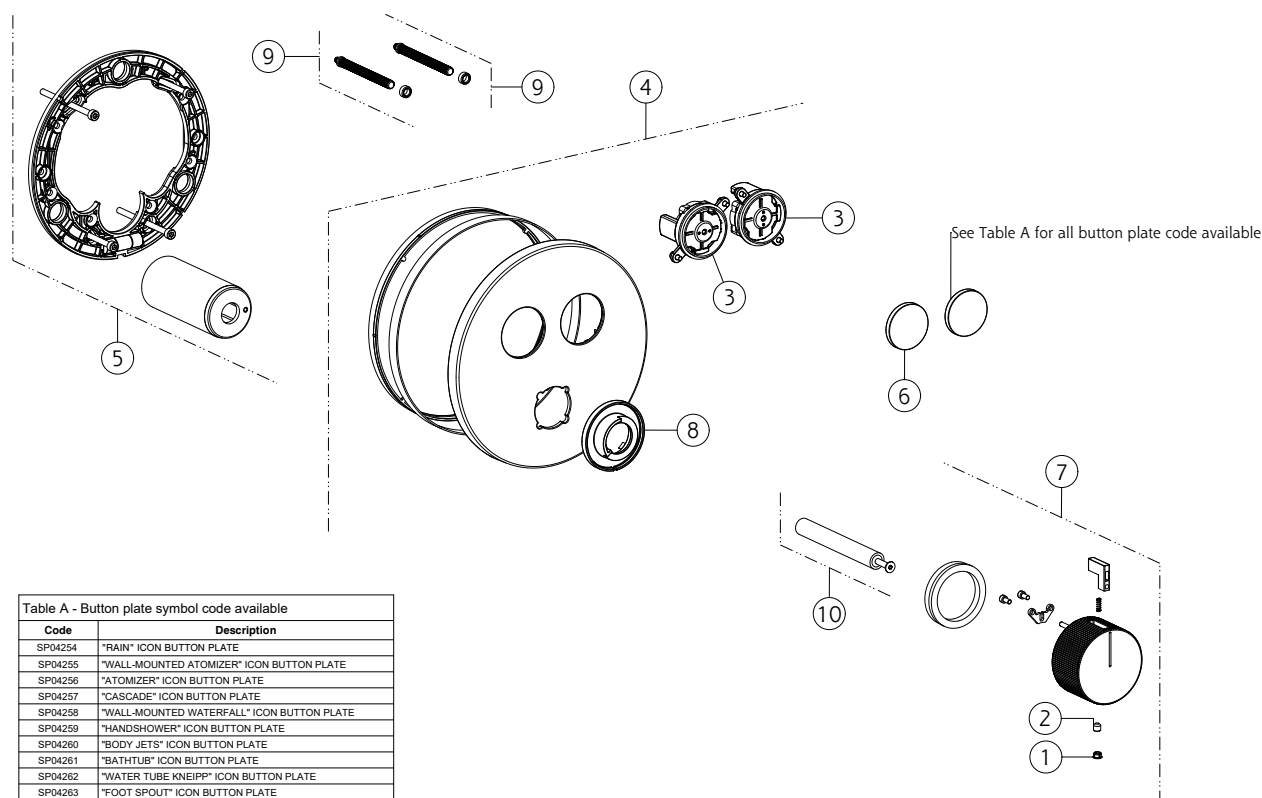


Table A - Button plate symbol code available

Code	Description
SP04254	"RAIN" ICON BUTTON PLATE
SP04255	"WALL-MOUNTED ATOMIZER" ICON BUTTON PLATE
SP04256	"ATOMIZER" ICON BUTTON PLATE
SP04257	"CASCADE" ICON BUTTON PLATE
SP04258	"WALL-MOUNTED WATERFALL" ICON BUTTON PLATE
SP04259	"HANDSHOWER" ICON BUTTON PLATE
SP04260	"BODY JETS" ICON BUTTON PLATE
SP04261	"BATHTUB" ICON BUTTON PLATE
SP04262	"WATER TUBE KNEIPP" ICON BUTTON PLATE
SP04263	"FOOT SPOUT" ICON BUTTON PLATE

N°	Code	Descrizione	Description
1	SP00002	TAPPINO COPRI GRANO	SCREW COVER
2	SP00610	GRANO	SCREW
3	SP03453	PULSANTE	PUSH BUTTON
4	SP04947	PIASTRA IN FINITURA	FINISHING PLATE
5	SP04714	CONTROPIASTRA	SUB PLATE
6	SP04254	PLACCA PULSANTE	BUTTON PLATE
7	SP02841	MANIGLIA	HANDLE
8	SP02846	ANELLO INDICATORE	INDICATOR RING
9	SP03364	DISTANZIALE	SPACER
10	SP04575	PROLUNGA	EXTENSION