63014

GPF6301400000G000

HI-FI

validity date
≥ 05/2020



External parts for thermostatic mixer for three separate functions, with push-button on/off controls.

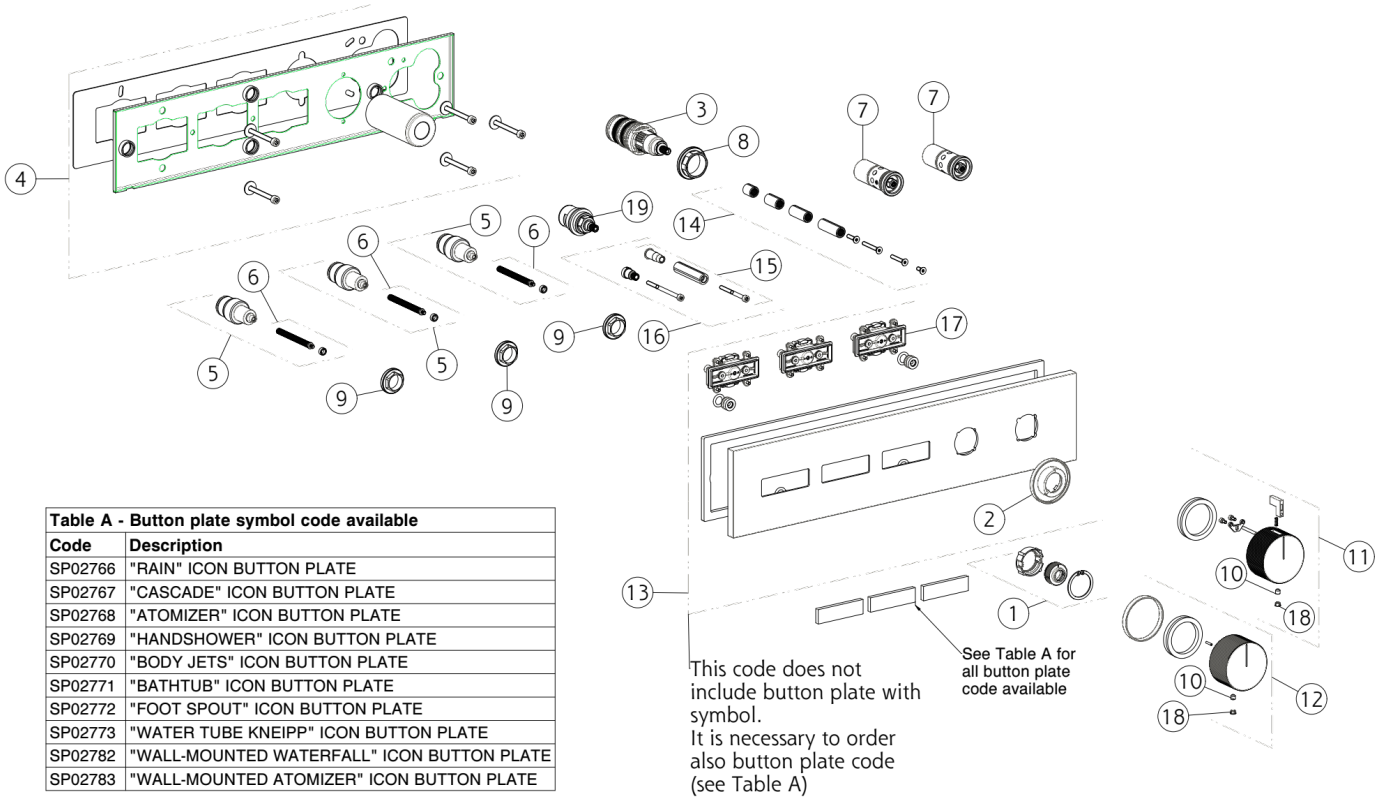


Table A - Button plate symbol code available	
Code	**Description**
SP02766	"RAIN" ICON BUTTON PLATE
SP02767	"CASCADE" ICON BUTTON PLATE
SP02768	"ATOMIZER" ICON BUTTON PLATE
SP02769	"HANDSHOWER" ICON BUTTON PLATE
SP02770	"BODY JETS" ICON BUTTON PLATE
SP02771	"BATHTUB" ICON BUTTON PLATE
SP02772	"FOOT SPOUT" ICON BUTTON PLATE
SP02773	"WATER TUBE KNEIPP" ICON BUTTON PLATE
SP02782	"WALL-MOUNTED WATERFALL" ICON BUTTON PLATE
SP02783	"WALL-MOUNTED ATOMIZER" ICON BUTTON PLATE

N°	Code	Description
1	SP02849	RING
2	SP02846	INDICATOR RING
3	SP01936	THERMOSTATIC CARTRIDGE
4	SP02870	BACK PLATE
5	SP02844	PUSH-BUTTON CARTRIDGE
6	SP03364	SPACER
7	SP00108	FILTER
8	SP01937	FIXING RING NUT
9	SP02845	FIXING RING NUT
10	SP00610	GRUB SCREW

N°	Code	Description
11	SP02841	HANDLE
12	SP02842	HANDLE
13	SP02871	FINISHING PLATE
14	SP01931	EXTENSION
15	SP01933	EXTENSION
16	SP02851	EXTENSION
17	SP02850	PUSH-BUTTON
18	SP00002	SCREW COVER
19	SP02843	HEADVALVE

Gessi S.p.A. Parco Gessi, 13037 Serravalle Sesia (Vercelli) Italy Tel. +39 0163 454111 Fax. +39 0163 453150 - www.gessi.com - gessi@gessi.it This drawing, as required by law, may not be made public or reproduced without the written authorization of GESSI S.p.A. Copyright GESSI S.p.A.