GESSI

65226

GPF6522600000G000

HI-FI

validity date
≥ 02/2022



External part for thermostatic mixer four simultaneous functions, with push button on/off controls.

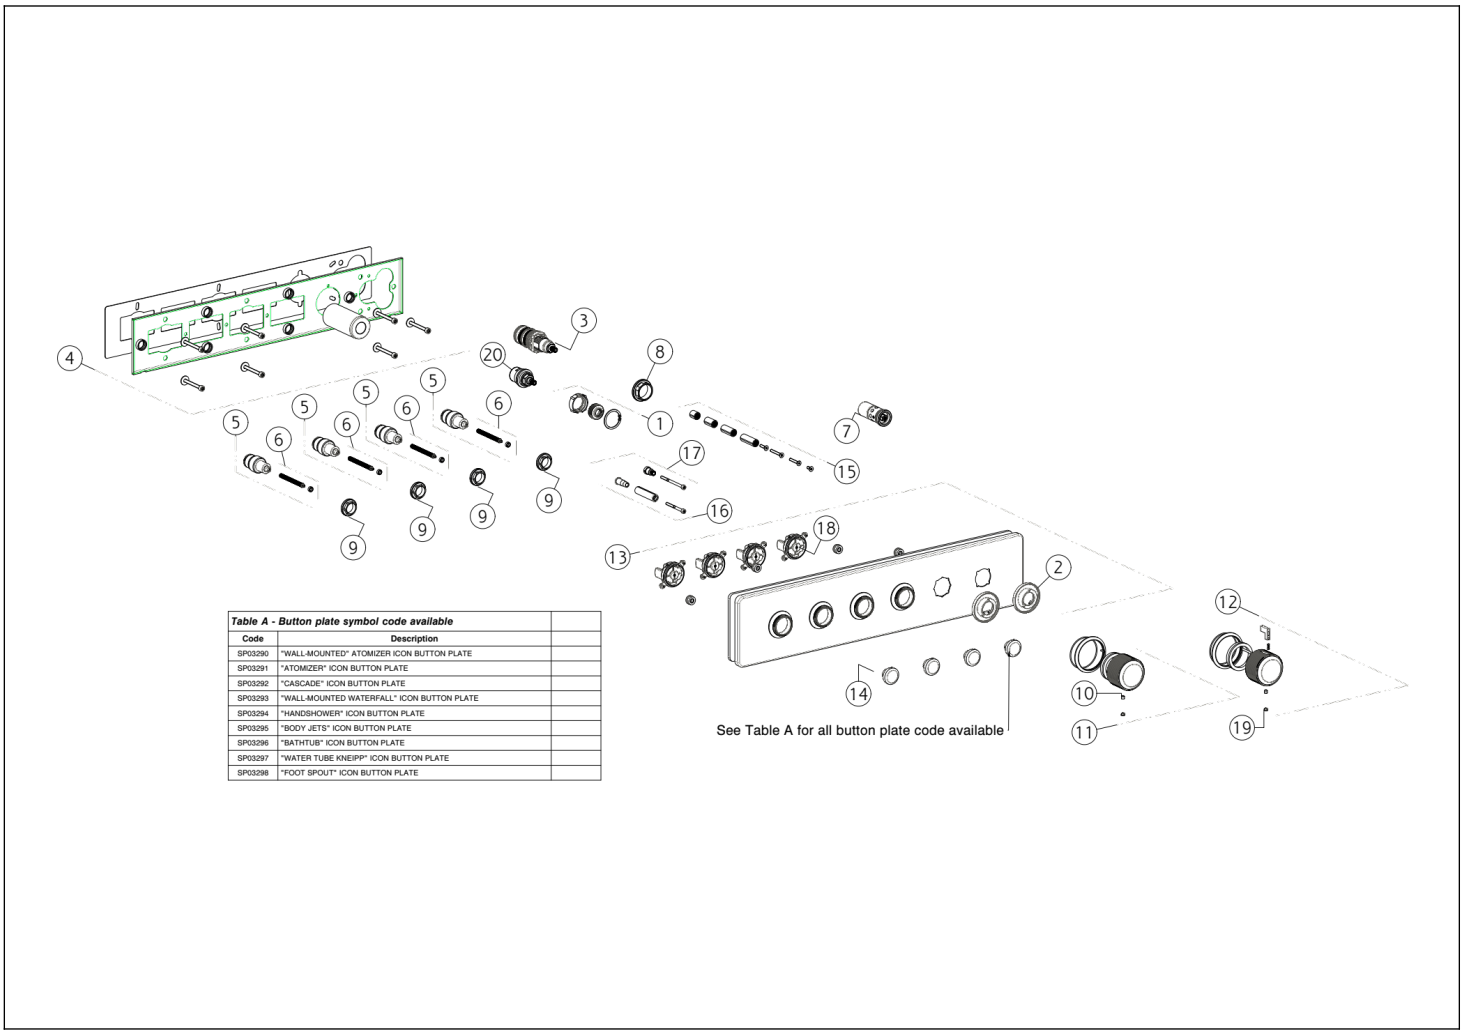

Table A - Button plate symbol code available		
Code	Description	
SP03290	"WALL-MOUNTED" ATOMIZER ICON BUTTON PLATE	
SP03291	"ATOMIZER" ICON BUTTON PLATE	
SP03292	"CASCADE" ICON BUTTON PLATE	
SP03293	"WALL-MOUNTED WATERFALL" ICON BUTTON PLATE	
SP03294	"HANDSHOWER" ICON BUTTON PLATE	
SP03295	"BODY JETS" ICON BUTTON PLATE	
SP03296	"BATHTUB" ICON BUTTON PLATE	
SP03297	"WATER TUBE KNEIPP" ICON BUTTON PLATE	
SP03298	"FOOT SPOUT" ICON BUTTON PLATE	

N°	Code	Description
1	SP02849	RING
2	SP02846	INDICATOR RING
3	SP01936	THERMOSTATIC CARTRIDGE
4	SP02872	SUB PLATE
5	SP02844	PUSH-BUTTON CARTRIDGE
6	SP03364	SPACER
7	SP00108	FILTER
8	SP01937	FIXING RING NUT
9	SP02845	FIXING RING NUT
10	SP00610	SCREW

N°	Code	Description
11	SP03442	HANDLE
12	SP03578	HANDLE
13	SP03441	FINISHING PLATE
14	SP03289	RAIN PUSH BUTTON PLATE
15	SP01931	EXTENSION
16	SP01933	EXTENSION
17	SP02851	EXTENSION
18	SP03453	PUSH BUTTON
19	SP00002	SCREW COVER
20	SP02843	HEADVALVE

Gessi S.p.A. Parco Gessi, 13037 Serravalle Sesia (Vercelli) Italy Tel. +39 0163 454111 Fax. +39 0163 453150 - www.gessi.com - gessi@gessi.it This drawing, as required by law, may not be made public or reproduced without the written authorization of GESSI S.p.A. Copyright GESSI S.p.A.